

MANUAL



Open the valve on your gas bottle/tank, adjust the regulator to 4bar and open the valve of the burner slowly.

Make sure that the air control ring covers the air holes on the burner. Now light the burner and you'll see that the flame is 'dancing'. Let the burner warm up a few moments before you, slowly, slide the air control ring backwards so the burner will suck it's own air what's needed for a perfect flame. The burner should work perfectly now.

When you are done with the work you first close the valve on the bottle/tank and let the flame 'die'.

Keep in mind that there will be some gas left in the tube! Propane gas is highly flammable or explosive so from the bottle/tank only in open air and NEVER inside the house.

ALWAYS!!!! use a regulator that is adjustable to 4Bar. and use the right wrench to fasten the regulator to the A flame almost is invisible in sunlight and can cause burning wounds. Make sure when you work with propane you be carefull with cloth and bodyparts to avoid accidents.

Everywhere where Propane gas is used, you should keep in mind that Propane is highly flammable.

Make sure that you have a fire-extinguisher in place!



Close the valve of the burner!

please remove equipment

gasvalve.
burners that



WE THANK YOU FOR CHOOSING THE "FIRE DEVIL"

